



## Maintenance Service Operations

Service operation		Schedule of services														
All Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
<b>Engine</b>																
Engine oil and filter, replace		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Engine/Transmission/Timing gear check for leaks <sup>A</sup>			X		X		X		X		X		X		X	
Service Reminder Indicator (SRI), reset		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Fuel lines and fuel filter, check for leakage and damage					X				X				X			
Exhaust system/check for leakage, mounting							X	X	X	X	X	X	X	X	X	X
Engine Air cleaner (ACL), clean the air cleaner housing/replace filter (engines 26/27/40/49: 4-cylinder, engine 61: 5-cylinder and engines 94/95: 6-cylinder) <sup>B</sup>					X				X				X			
Engine Air cleaner (ACL), clean the air cleaner housing/replace filter (engines 90/93/A9: 6-cylinder) <sup>B</sup>				X			X			X			X			X
Spark plugs, replace (engine 61: 5-cylinder, engines 90/93/A9/94/95: 6-cylinder)								X							X	



# 01 Service and maintenance

01

## Maintenance Service Operations

Service operation		Schedule of services														
All Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Spark plugs, replace (engines 26/27/40/49: 4-cylinder)							X						X			
Coolant level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Engine coolant check & adjust antifreeze rating & anti-corrosion agent			X		X		X		X		X		X		X	
Alternator rubber sleeve, replace (engines 90/93/A9/94/95: 6-cylinder only <sup>C</sup> )																X
Accessory drive belt, belt tensioner & idler pulley, replace (engines 26/27/40/49: 4-cylinder, engines 90/93/A9/94/95: 6-cylinder) <sup>D</sup>																X
Accessory drive belt, belt tensioner & idler pulley, replace (engine 61: 5-cylinder only) <sup>E</sup>													X			
Timing belt, belt tensioner and idler pulley, replace (engine 61: 5-cylinder only) <sup>E</sup>													X			
Timing belt tensioner & idler pulley, replace (engines 26/27/40/49: 4-cylinder only) <sup>D</sup>																X



<b>Maintenance Service Operations</b>
---------------------------------------

Service operation		Schedule of services														
All Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
<b>Steering, Front and Rear Suspension</b>																
Power steering fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Steering/front suspension, check for wear according to: Wheel angles check							X	X	X	X	X	X	X	X	X	X
Rear suspension, check for wear according to: Wheel angles check							X	X	X	X	X	X	X	X	X	X
<b>Transmission, Driveshaft and Differential</b>																
Automatic transmission fluid level, check/adjust <sup>F</sup>						X					X					X
Final drive/bevel gear, visual inspection (AWD models only) <sup>G</sup>			X		X		X		X		X		X		X	
Driveshaft joints, check for wear/play							X		X		X		X		X	
Driveshafts, check rubber boots							X	X	X	X	X	X	X	X	X	X
Propeller shaft, pilot bearing and universal joints, check wear (AWD models only)							X	X	X	X	X	X	X	X	X	X
<b>Controls and Lighting</b>																



# 01 Service and maintenance

01

## Maintenance Service Operations

Service operation		Schedule of services														
All Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Washer fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check all wiper blades and washers for headlights and windshields for function and signs of wear		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
<b>Body</b>																
Cabin air filter, replace <sup>H</sup>			X		X		X		X		X		X		X	
Clean inside of windshield in front of camera (vehicles with camera for collision warning)		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
<b>Brake System</b>																
Brake fluid level, check & adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake fluid, replace <sup>I</sup>					X				X				X			
Parking brake, check/adjust			X		X		X		X		X		X		X	
Brake pads/discs, check		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake hoses and lines, check for damage/leaks					X				X				X			
<b>Wheels and Tires</b>																



## Maintenance Service Operations

Service operation		Schedule of services														
		miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140
All Models	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
	Wheels and tires, check pressure, wear and condition		X	X	X	X	X	X	X	X	X	X	X	X	X	X
Tire inflator kit <sup>J</sup>																
Spare tire check for damage, wear, and tire pressure <sup>K</sup>					X				X				X			

Check and replace parts or software, as required by Volvo Cars of North America, LLC, that are covered under the terms of the Volvo New Car Warranty.

A In the event of a leak from the transmission, check the oil level.

B May be necessary to change more frequently when driving in dusty/dirty areas.

C Replace at 150,000 miles/240,000 kilometers or 15 years, whichever comes first.

D Replace at 150,000 miles/240,000 kilometers or 10 years, whichever comes first.

E Replace at 120,000 miles/192,000 kilometers or 10 years, whichever comes first.

F Check automatic transmission fluid level only if an external leak is identified. **Volvo recommends changing transmission fluid every 50,000 miles/80,000 kilometers, only on vehicles used for towing, or when a message appears in the instrument panel text window.**

G Only check the level if there is leakage.

H Recommended to replace at least once a year or more often in heavy traffic or dirty/dusty areas.

I Recommended to replace every 3 years or 40,000 miles (if driven in mountainous areas or humid climates – every one year) at owner's request.

J Check expiration date label every four years for replacement date on vehicles with this equipment.

K Check spare tire pressure every two years or every 40,000 miles/64,000 kilometers.