

Maintenance Service Operations

The following table applies to all non-hybrid models

Service operation		Schedule of services														
All Non-hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Engine																
Engine oil and filter, replace		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Engine/Transmission/Timing gear check for leaks ^A			X		X		X		X		X		X		X	
Service Reminder Indicator (SRI), reset		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Fuel lines and fuel filter, check for leakage and damage					X				X				X			
Engine Air cleaner (ACL), clean the air cleaner housing/replace filter (engines A2/A0/10/26/40/49: 4-cylinder ^B).					X				X				X			
Spark plugs, replace (engines A2/A0/10/26/40/49: 4-cylinder)							X						X			
Engine coolant check & adjust antifreeze rating & anti-corrosion agent		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Accessory drive belt, belt tensioner & idler pulley, replace (engines A2/A0/10/26/40/49: 4-cylinder ^C)																X

Service operation		Schedule of services														
All Non-hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Timing belt tensioner & idler pulley, replace (engines A2/A0/10/26/40/49: 4-cylinder only) ^C																X
Steering, Front and Rear Suspension																
Power steering fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Steering/front suspension, check for wear according to: Wheel angles check					X				X				X			
Rear suspension, check for wear according to: Wheel angles check					X				X				X			
Transmission, Driveshaft and Differential																
Automatic transmission fluid level, check/adjust ^D						X					X					X
Final drive/bevel gear, visual inspection (AWD models only) ^E					X				X				X			
Driveshaft joints, check for wear/play					X				X				X			
Driveshafts, check rubber boots					X				X				X			
Propeller shaft, pilot bearing and universal joints, check wear (AWD models only)					X				X				X			
Controls and Lighting																



SERVICE AND MAINTENANCE



Service operation		Schedule of services														
All Non-hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Washer fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check all wiper blades and washers for headlights and windshields for function and signs of wear		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
External lighting, check		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Headlights, fog lights, check and align			X		X		X		X		X		X		X	
Horn, check function		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Body																
Cabin air filter, replace ^F			X		X		X		X		X		X		X	
Clean inside of windshield in front of camera (vehicles with camera for collision warning)		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Seatbelts																
Seatbelts, check function		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake System																
Brake fluid level, check & adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake fluid, replace ^G					X				X				X			
Parking brake, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

Service operation		Schedule of services														
All Non-hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Brake pads/discs, check		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake hoses and lines, check for damage/leaks					X				X				X			
Wheels and Tires																
Wheels and tires, check wear and condition		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Wheels and tires check inflation pressure			X		X		X		X		X		X		X	
Tire inflator kit ^H																
Spare tire check for damage, wear, and tire pressure ^I		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

Check and replace parts or software, as required by Volvo Car USA, LLC, that are covered under the terms of the Volvo New Car Warranty.

A In the event of a leak from the transmission, check the oil level.

B May be necessary to change more frequently when driving in dusty/dirty areas.

C Replace at 150,000 miles/240,000 kilometers or 10 years, whichever comes first.

D Check automatic transmission fluid level only if an external leak is identified. **Volvo recommends changing transmission fluid every 50,000 miles/80,000 kilometers, only on vehicles used for towing, or when a message appears in the instrument panel text window.**

E Only check the level if there is leakage.

F Recommended to replace at least once a year or more often in heavy traffic or dirty/dusty areas.

G Recommended to replace every 3 years or 40,000 miles (if driven in mountainous areas or humid climates – every one year) at owner's request.

H Check expiration date label every four years for replacement date on vehicles with this equipment.

I Check spare tire pressure (where applicable) every two years or every 40,000 miles/64,000 kilometers.